



| PRE AMP SELECT | RECORD PROGRAM | LED'S |
|----------------|----------------|-------|
| PHONO          | CR 1           | CR 7  |
| CD             | CR 2           | CR 8  |
| AUX            | CR 3           | CR 9  |
| TAPE 1         | CR 4           | CR 10 |
| TAPE 2         | CR 5           | CR 11 |
|                | CR 6           | CR 12 |

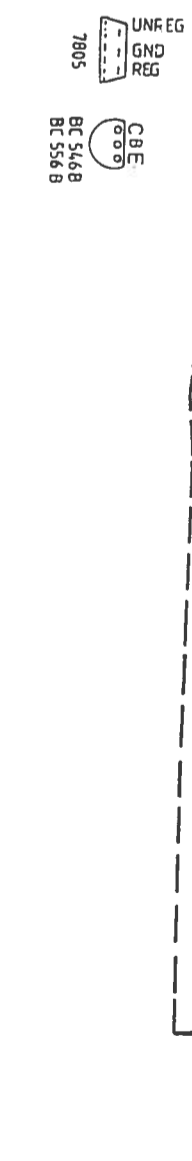

PRESETS: 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100.

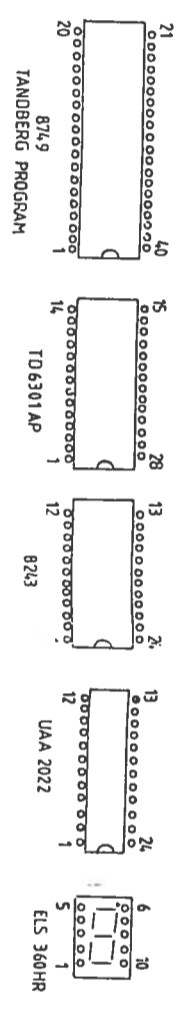