SCHEMATIC DIAGRAM

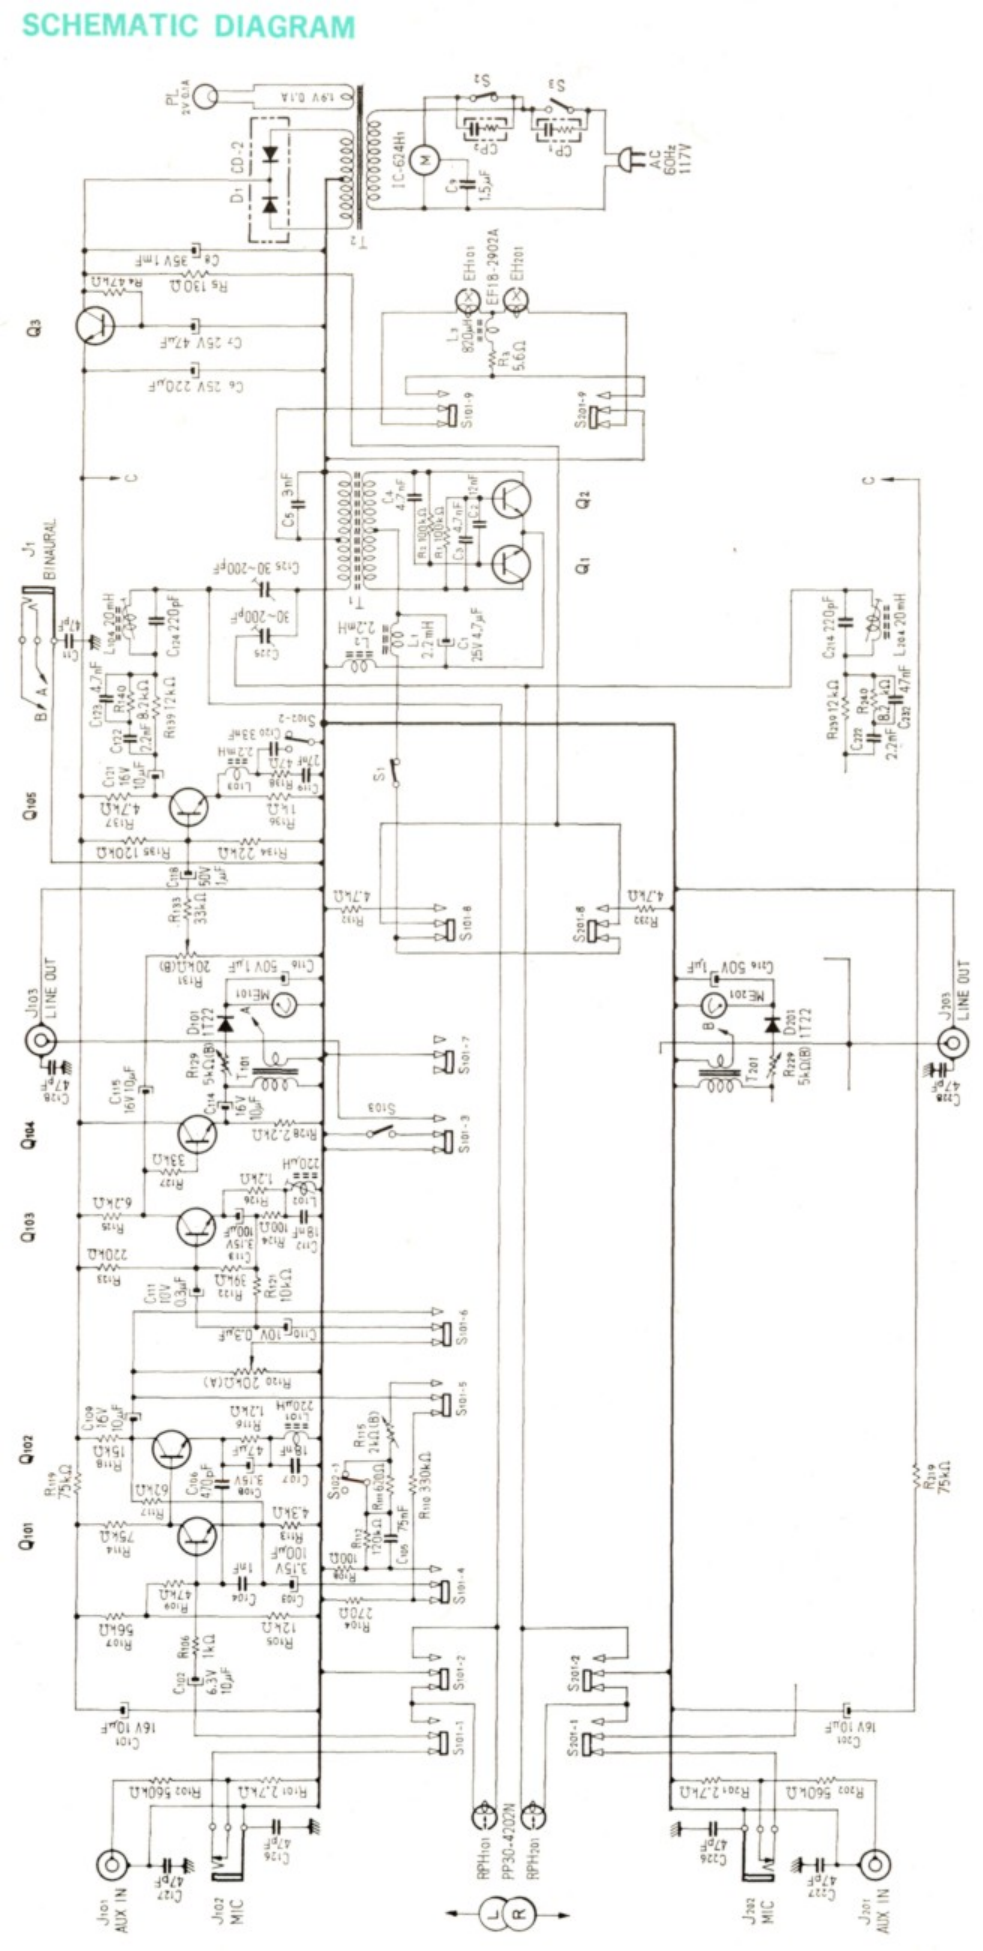

S101, 201	Record/Playback switch (record position)
S102, 202	Speed and equalize switch (7½ ips position)
S103, 203	Muting switch (OFF position)
S1	Bias shut-off switch (ON position)
S2	Automatic shut-off switch (ON position)
S3	Power switch (ON position)